



July 23, 2007

TECHNICAL SERVICE BULLETIN # **CM0005**


Attention: Dealer Technicians
Service Managers

Subject: Removing & Re-Installing CM-2000 Rust Modules
From One Vehicle To Another

Please note that when a Final Coat CM-2000 Electronic Corrosion Module is removed from one vehicle and re-installed in another vehicle, the wiring harness must be removed carefully and be fully in tact before installing it into another vehicle.

This means ...

- a) The red power wire must have the in-line fuse holder still attached with a 1 amp fuse in place. **NOTE: NEVER** install a wiring harness where the power wires have been cut and no longer has an in-line fuse.
- b) The blue output wire must be long enough so that it can be fastened at least 4 feet away from where the black ground wire will be connected.

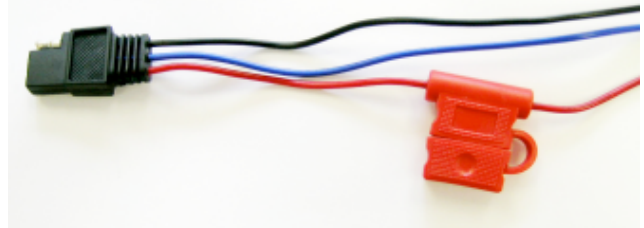

If the existing harness does not meet the above requirements, then you can obtain a new harness by calling CAP Inc. and order part number # 2000-HN

Installing an improper wiring harness or failure to install a CM-2000 to manufacturer's specifications will void all warranties.

For further information, please contact your Final Coat service rep or contact our office at:
(800) 387-3760